

HOW TO RUN THE TIME CLOCK

IF THE CLOCK IS TURNED OFF:

Turn it on by hitting the **ON** switch on the right hand side of the machine.
It will ask you the following> “Do you want to start where turned off last?” **YES**

NOTE: If the handheld remote will not start the clock - follow the directions at the bottom of the page

TO SET THE TIME:

SET / TIME / type in desired time of 18:00 / YES
PERIOD 1 (or 2)
Use the handheld devise to turn time on and off during play

TO PUT UP THE SCORE:

HOME SCORE (or GUEST SCORE) / 1 / YES (on the right hand side)
To add another point do the same as above by putting **1** to add to the current score

TO CORRECT THE SCORE:

SET / HOME SCORE (or GUEST SCORE) /enter the total score/YES

TO SOUND THE BUZZER:

HORN or SQUARE BUTTON ON THE HANDHELD REMOTE

TO PUT UP PENALTY TIME:

SET / HOME PENALTY (or GUEST PENALTY)
ENTER THE TIME AS 02:00 / YES (must be 4 digit time)
ENTER PLAYER NUMBER (must be 2 digits ex: 04) / YES

TO CLEAR PENALTY:

HOME PENALTY (or GUEST PENALTY) / PENALTY CLEAR/YES

IF MORE THAN ONE PENALTY ON THE SAME TEAM TO CLEAR:

HOME PENALTY (or GUEST PENALTY) – keep pressing until the player # you want to clear shows up / PENALTY CLEAR / YES

USE THE HANDHELD REMOTE TO START AND STOP THE CLOCK

NOTE: IF FOR SOME REASON THE HANDHELD REMOTE DOES NOT WORK DO THE FOLLOWING:

Turn the whole machine off and turn it back on
It will ask you the question: “Do you want to start where turned off last? Hit **NO**
It will ask you if you want to use a Bookmark. Hit **NO**
It will ask you to enter a model code. Type in **871**
It will ask you if you want to use Penalty Time Out. Hit **NO**
The system should now be ready for you to set the time for your game.